

4 IN 1 Racing Wheel PS4/PS3/Switch/PC

Model : PS-4200

Fully compatible USB powered multi-format twin vibration effect racing wheel, paddle shift, stick shift and foot pedals system to take your race game experience to the next level. All of the games controller buttons and controls are present from your favorite consoles. The Racing wheel supports Vibration Function game play for use with PS4™/PS3™/Switch™ and Personal Computer.

1. System Requirement:

- a) Game Console: PS4™/PS3™/Switch™, PAL or NTSC system/ PC
- b) Game Style: PS4™/PS3™/Switch™, PAL or NTSC system/ PC
- c) Operating Environment: House Supply

2. Hardware Features:

- A> Vogue external appearance design;
- B> Vibration back up for any exciting car racing games
- C> Easy to operate, just plug in and play.
- D> Support the Analog mode

3. Product Technical Specifications:

- a) Plug & Play racing wheel compatible with PS4™, PS3™, Switch™ and PC
- b) 2 axes, D-pad and 10 independent fire buttons are available.
- c) Two built-in motors create vibration feedback effect for more realistic and lifelike game
- d) Racing wheel with 180° steering rotation
- e) With Program function.
- f) Plug & Play spring loaded acceleration and brake control pedal
- g) Spring return gear shift
- h) Cable length for wheel and pedal is respectively 1.8 m and 1.5 m

4. Connection and installation:

- ✓ Plug the foot pedal USB connector with the racing wheel USB port.
- ✓ Be aware to let wheel angle positioning at 0° (do not touch the wheel) before you plug the wheel connector into your games console or PC when power is on. This will ensure

5. Programmable function

- Programming:

- Press the "PROGRAM" button for 3 seconds. The green LED will light.
- Press the function key which is to be programmed (Pedal, back triggers or gear shift). The green LED light will flash.
- Press the function key which will be represented, ($\Delta/\circ/\times/\square/L1/R1/L2/R2$ buttons).

The green LED remains lit.

- Press "PROGRAM" again, the green LED will turn off. Programming is now finished.

- Cancelling programming

Cancelling a programmed key

- Press the "PROGRAM" button for 3 seconds. The green LED will light.
 - Press the function key whose programming is to be canceled. The green LED will flash.
 - Press the "PROGRAM" button again, the green LED will turn off. The button programming is now canceled.
- Cancelling many programmed keys simultaneously.
Press "SELECT" and "START" buttons at the same time. The green led will flash 2 times.
The all button Programming is now canceled.

Note:

- Do not remove the racing wheel when the console power is on.
- Do not use and stock the product in high temperature or humidity.
- Do not put the heavy thing on it.
- Do not strongly beat or knock when playing.
- Do not tamper the racing wheel. There are no serviceable parts within this product.

CUSTOMER INFORMATION

PlayStation® & PS3™ & PS4™ are registered trademarks of Sony Computer Entertainment Inc.
This product is not sponsored, endorsed or approved by Sony Computer Entertainment Inc.

6. Wheel buttons definition:

Wheel buttons	PS3	PS4	SWITCH	PC
Δ	Δ	Δ	X	4
\circ	\circ	\circ	A	2
\times	\times	\times	B	1
\square	\square	\square	Y	3
L1	L1	L1	LB	5
R1	R1	R1	RB	6
L2	L2	L2	LT	7
R2	R2	R2	RT	8
SELECT	SELECT	SELECT	SELECT	9
START	START	START	START	10
<u>Right pedal</u>	\times	<u>R2</u>	<u>R2</u>	<u>LY</u> ↑
<u>Left pedal</u>	\square	<u>L2</u>	<u>L2</u>	<u>LY</u> ↓
<u>Shift-down</u>	<u>L1</u>	<u>L1</u>	<u>L1</u>	<u>Z</u>
<u>Shift-up</u>	<u>R1</u>	<u>R1</u>	<u>R1</u>	<u>8</u>
Wheel	LX	LX	LX	LX
D-pad	D-pad	D-pad	D-pad	D-pad
MODE	MENU	MODE	MODE	MODE

In the table above shows the default function definition of key features in the game platform.
The key definition with underline can be programmed.