

# Star4Live User Configuration


## NVR User Groups

- Admin: Default super administrator in the system, has full system access.
- Default: Default user reserved in the system, cannot be created or deleted, and only has access to live view.
- Operator: Has basic permissions and access to cameras.
- Guest: Only has access to cameras by default


## Configuring user rights to the NVR

The administrator will follow the below steps to access the user rights configuration settings for the NVR:

1. Using Internet Explorer, navigate to Star4Live.com
2. Click Login and enter your account credentials
3. Click **Access** to access your NVR
4. Click **Settings>User**

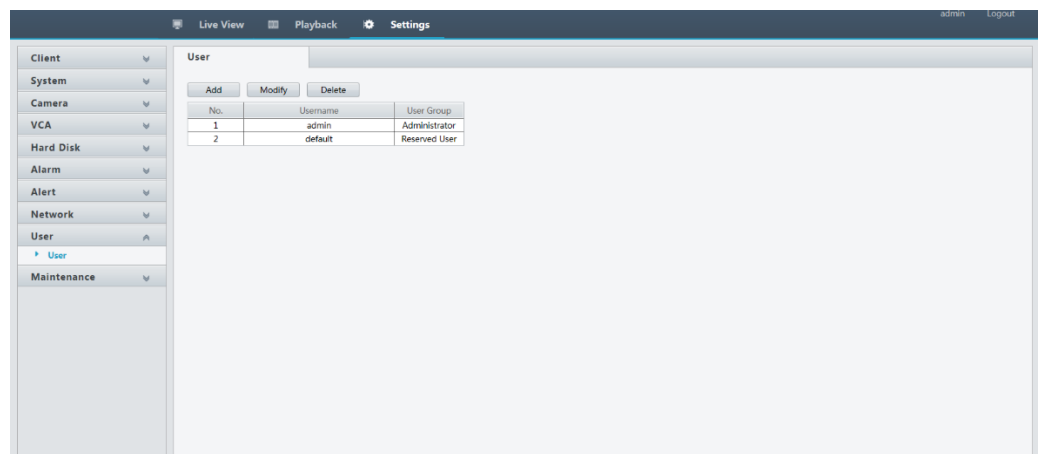

5. To add a user, click **Add**, and then set the username, password, user group, and permissions as needed.
6. Then click **Save**.

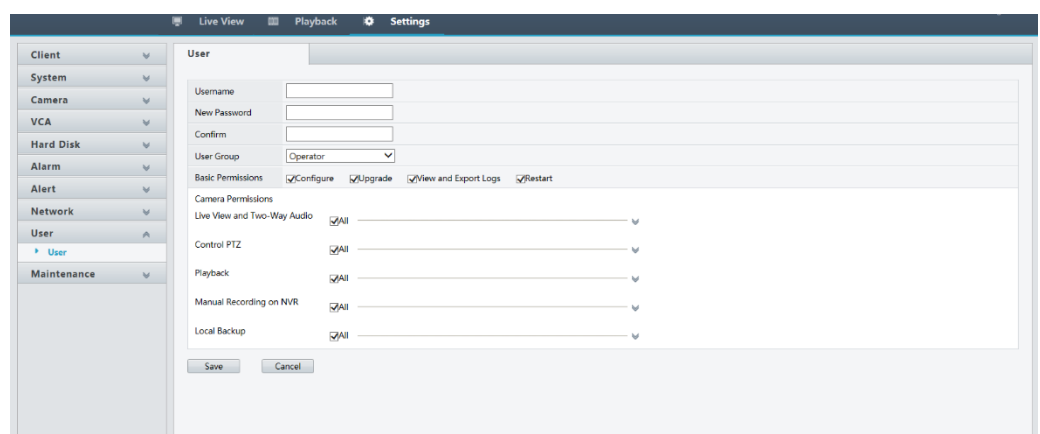

7. Use the Modify or Delete buttons as needed. If you change the password for a user, the new password takes effect at the user's next login.