

Star4Live Sharing to Users

User Rights

- These are configured from the User section of the NVR Settings
- Reference the Star4Live User Configuration Guide for the steps to follow to access the user rights configuration settings for the NVR

Sharing user rights to users

The administrator will follow the below steps to share user rights to users:

1. Using Internet Explorer, navigate to Star4Live.com
2. Click Login and enter your account credentials
3. Click **Share** to fill in sharing device information
4. Complete the fields to share to registered users and select the appropriate user rights for each registered user
 - a. Share To: enter the username/email for the registered user
 - b. Valid Till: update field with date registered user access should expire
 - c. User Rights: select the appropriate user rights for the registered user (see notes to the left for more information about User Rights)
 - d. Description: if desired, enter a description

Device Name:	<input type="text" value="IPC"/>
Share To:	<input type="text" value="user"/>
Valid Till:	<input type="text" value="2020-01-29 00:00:00"/>
User Rights:	<input type="text" value="admin"/>
Description:	<input type="text"/>
	<input type="button" value="Confirm"/> <input type="button" value="Back"/> <input type="button" value="Reset"/>