

Smarter Control Solutions.



Model HTE-01

Programming Schedule Setup

QUICK SHEET

The Model HTE-01 is a Fully Programmable Smart Thermostat that has been set at the at the factory to a default setting of OFF (N).

To activate the Programming Schedule function please follow the steps below.



First you must go into the the "Parameter Setup Mode.

To access the Parameter Setup Screens, please PRESS and HOLD the "MODE" and "FAN" buttons together until you hear a "BEEP", then release the buttons. You will now be in Parameter Setup.

Button Function in Parameter Setup



Use the "FAN" button to Scroll forward and the "MODE" button to backward through the available Parameter setup screens.

Parameter setup screens

The Following is a Screen by Screen display order that you will see when in Parameter Setup:

Please Scroll through the Parameter screens till you get to Screen (9), the "Schedule Screen".

1 ModuLE



The display shows the number of base modules currently paired. Press "Fan" to continue. 2



Daylight Savings Time: Use the button to toggle DST Mode Π or Π F. Press "Fan" to continue.

3



buttons to set the month. Press "Fan" to continue. 4



buttons to set the date. Press "Fan" to continue. 5



buttons to set the year. Press "Fan" to continue.

6



Hour: Use buttons to set hour. Press "Fan" to continue. 7




buttons to set the minute. Press "Fan" to continue. o ergency Hea



Use buttons to enable (y) or disable (n) Emergency Heat.

Press "Fan" to continue.

Schedule Setup:

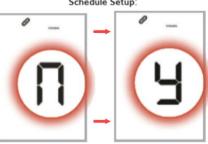

Press the

button to toggle schedule to "Y". Press "Fan" to confirm.

Choose Schedule Type



When prompted to **OUP dRLE** use

buttons to toggle to "y". Press "Fan" to continue.

Display	Description	Action when "Fan" pressed
Ø5+2	Weekday (MF) or Weekend (SS)	MF – Set periods*
		SS – Set periods*
PIII	Same schedule throughout the week	Set periods*
Ø JA y	Different schedule each day	MO, TU, WE, TH, FR, SA, SU – Set periods*

^{*} Periods SS, WK, MO, TU, WE, TH, FR, SA, SU are set up in the same way as listed below MF.

Period Setup






Use the buttons to set the hour that the first period begins. Press "Fan" to continue.



Use buttons to set the minutes for the first period. Press "Fan" to continue.

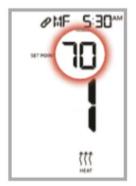

Use buttons to set the target set point for Heating. Press "Fan" to continue.




Use buttons to set the target set point for Cooling. Press "Fan" to advance to the next period.



Set time and temperature set points for each desired period.



To disable a period, press the button until --:-- is displayed. Up to 6 periods per day or group of days can be programmed.

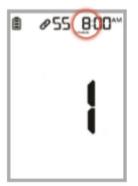

After the 6th period is programmed, the HTE-01 Thermostat will move to the next day or group, depending on the schedule type.



Once all periods and day groups have been programmed, a prompt to Update will be displayed.

To accept this current inputted schedule leave screen at "NO" (N) by pressing the "Fan" button to confirm and Exit Setup.

To make further changes to the Schedule Setup, change to "Yes" (y) and continue.

If you have any questions, please feel free to contact our Customer Service Dept. at 1-800-717-1682 or Email Us at customerservice@habitat.support