

habitat™

Smarter Control Solutions.



**Model HTE-01
Initial Parameter Setup
QUICK SHEET**

Parameter Setup


Daylight Savings Time, Date & Time Settings:

To setup the Habitat HTE-01 please follow these quick simple steps.




To access the Parameter Setup Screens , please PRESS and HOLD the "MODE" and "FAN" buttons together until you hear a "BEEP" , then release the buttons. You will now be in Parameter Setup.

Button Function in Parameter Setup

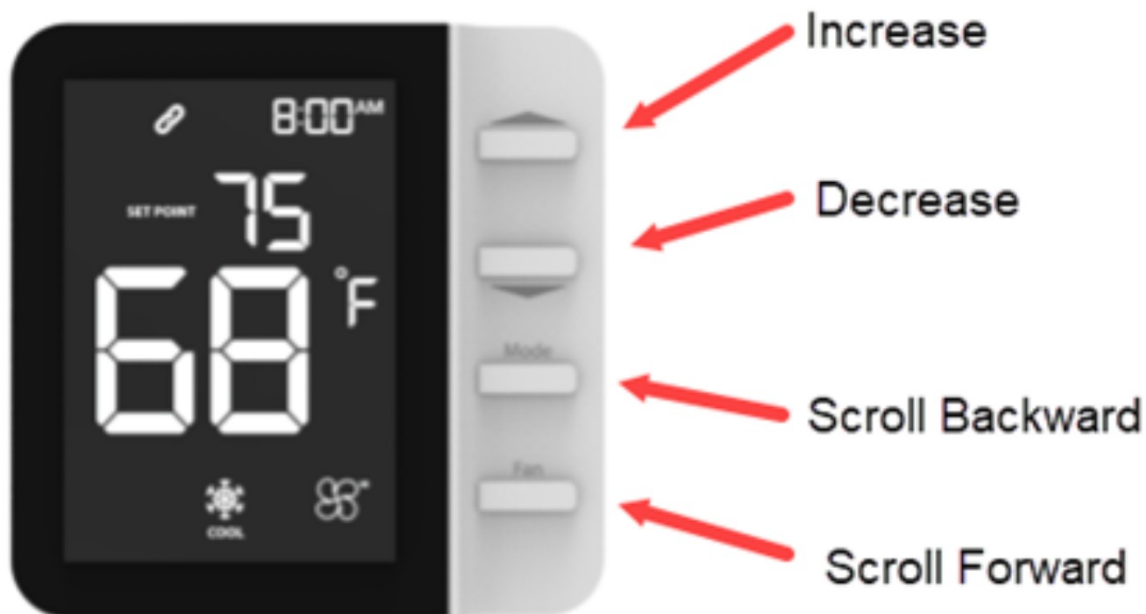

Use the "FAN" button to Scroll forward and the "MODE" button to backward through the available Parameter setup screens.

Parameter Screens

Parameter	Description	Key	Action
Base Module	Identify or Pair base modules	▲	Identify existing base module(s)
		▼	Pair additional base module(s)
Daylight Savings Time (DST)	Enable/Disable DST	▲ or ▼	Toggle Daylight Savings Time Mode ON/OFF
Month	Set Month		Set Month - 1 to 12
Date	Set Date		Set Date - 1 to 31
Year	Set Year		Set Year
Hour	Set Hour		Set Hour - 12 am to 12 pm
Minute	Set Minute		Set Minute - 1 to 59
Emergency Heat	Enable/Disable 		Toggle Emergency Heat "y" or "n"
Schedule	Enable/Disable Schedule		Toggle Schedule "y" or "n"

Parameter setup screens

The Following is a Screen by Screen display order that you will see when in Parameter Setup:

1




The display shows the number of base modules currently paired. Press "Fan" to continue.

2




Daylight Savings Time: Use the  button to toggle DST Mode **ON** or **OFF**. Press "Fan" to continue.

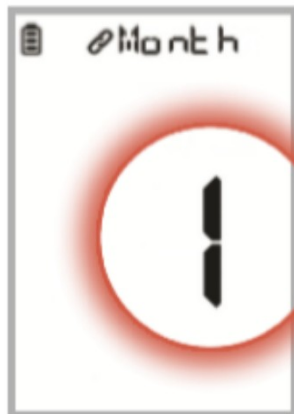

3



Month: Use  buttons to set the month. Press "Fan"  to continue.

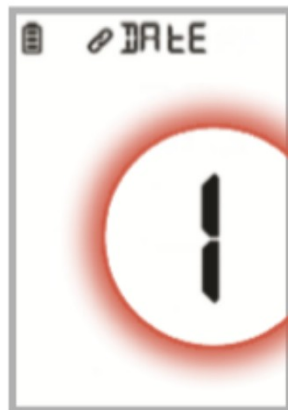

4



DATE: Use  buttons to set the date. Press "Fan"  to continue.

5




YEAR: Use  buttons to set the year. Press "Fan"  to continue.


6



Hour: Use  buttons to set hour. Press "Fan" to continue.

7

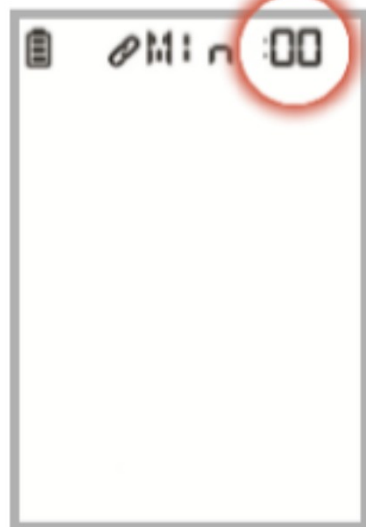



Min: Use  buttons to set the minute. Press "Fan" to continue.

Emergency Heat Setting: *

***When a unit is equipped with
Emergency Heat capability function.**

8



Use   buttons to enable (y) or disable (n) Emergency Heat.

If enable (y) when the room temperature fails below the Frost protect Setpoint which is preset at the factory at 45 F / 7 C *, the Emergency back-up heat will be activated.

Press "Fan" to continue.

* Frost Protect setpoint can be changed from the factory default setting in Administrative Parameters see Programming Manual.


Schedule Setup:


The Model HTE-01 is a Fully Programmable Smart Thermostat that has been set at the factory to a default setting of OFF (N).

*** If the user would like to activate this function and setup a Schedule this can be achieved by simply setting the Setup screen to YES (Y).**

If YES (Y) is selected , please refer to the Programming Guide for full instruction on this feature.

9

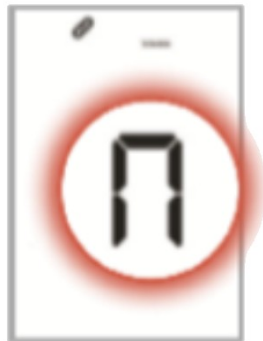

Press "Mode" to scroll back to the Schedule Parameter and use the  button to toggle schedule to "Y".*

Press "Fan" to Confirm and Exit the Parameter Setup Mode.

If you have any questions , please feel free to contact our Customer Service Dept. at 1-800-717-1682 or Email Us at customerservice@habitat.support