



#### HT7-01 Wi-Fi Module Installation Guide

Habitat Technologies
330 East 38th Street, Suite 530, New York, NY 10016-0444
Customer Service Toll Free: 1-800-717-1682
Web Site: www.habitattechnologies.com
customerservice@habitat.support.







Your Benefit: Indicates helpful installation or setup



Scan the adjacent QR Code for documentation or Installation, Operation and Programming of the HTE-01 Thermostat.

#### Safety Instructions

Please read these instructions carefully BEFORE INSTALLING and using the HTZ-01 Wi-Fi Module. Keep this guide in a safe place for future reference.

- Installation and repairs are to be performed by a qualified contractor in strict accordance with the requirements of state and local regulating agencies. In the absence of local requirements, follow ANSI/NFPA 70, National Electric Code.
- The HTZ-01 Wi-Fi Module is powered by 12 VDC through the RJ45 Connector from an HTM-01 Base Module. DO NOT APPLY external power to this device.
- DO NOT expose the HTZ-01 Wi-Fi Module to water
- DO NOT connect Ethernet or Power over Ethernet (PoE) cable into the RJ-45 connector on either the HTZ-01 Wi-Fi Module or HTM-01 Base Module.
- DO NOT store the HTZ-01 Wi-Fi Module where temperatures drop below -4°F (20°C) or exceed 185°F (85°C).
- DO NOT operate the HTZ-01 Wi-Fi Module in temperatures below 32°F (0°C) or above 104°F (40°C).
- DO NOT use solvents or aggressive cleaning agents to clean these devices. A dry, soft cloth is recommended.

System

# What's In The Box





HTZ-01 Wi-Fi Module

### Installation

For best results, the HTZ-01 Wi-Fi Module is to be mounted in a convenient location on the exterior of the HVAC equipment where there is no sheet metal between the Wi-Fi Module and the

- mounting adhesive provided. MAKE SURE the Connector Cable will easily reach from the HTM-01 Base Module to the HTZ-01
- · Remove the protective label from both modules and connect them together using the Connector Cable with RI45 Connectors
- Once power is supplied to the HTZ-01 Module from the Base Module, follow the application guide:
- (www.habitattechnologies.com/downloads) to setup the Wi-Fi

#### HTZ-01 Main Button Functions

Button Action	Zigbee Mode	Action  Identify all thermostats and base modules on the Zigbee network by flashing LED	
Press & Release	Identify		
Hold 3 to 10 s	Join Network	Allow devices to join the Zigbee network	
Hold more than 10 s	Reset	Reset the Zigbee network, remove all devices	

#### Indicator LED Diagnostic Key

Indicator	No Light	Orange	Flashing Orange	Red	Green	Flashing Green
Internet	Not registered	Registered but can't connect			Internet connected	
Wi-Fi		Not connected to Wi-Fi		Lost Wi-Fi connection	Connected to Wi-Fi network	Joining Wi-Fi network
ZigBee	No Zigbee network created	Waiting for Zigbee devices to join	Exceeded maximum number of devices		Zigbee network connected	Identifying

# Specifications

Controls	Pairing button Reset Button (Hidden)				
LED Indications	Internet Wi-Fi Z		Zigbee		
Operating Conditions	32 to 104°F (0 to 40°C) Max. RH 90% (non-condensing)				
Storage Conditions	-4 to 185°F (-20 to 85°C) Max. RH 90% (non-condensing)				
Power Input	12 VDC (Supplied from HTM-01 through the RJ-45 Connection)				
Radio	Wi-Fi: 802.11b/g/n, 2.4GHz Zigbee: 802.15.4, 2.4 GHz				
Dimensions	3.86" x 3.66" x 0.98" 9.8 cm x 9.3 cm x 2.5 cm				
Approvals	FCC and Industry Canada				
Environmental	RoHS Compliant				

# FCC Statements (continued)

interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception. which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment
- . Connect the equipment into an outlet on a circuit different from that to which the receiver is co
- · Consult the dealer or an experienced radio/TV technician for help

### **FCC and Industry Canada**

RE Radiation Exposure statement: This ear complies with FCC and Industry Canada RF radiation exposure limits set forth for an uncontrolled environment

This equipment should be installed and operated with a minimum distance of 20 centimeters between the antenna and all persons.



## **Industry Canada**

This device complies with Industry Canada license exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

#### **FCC Statements**

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are pursuant to Part 15 of the P.C. Rules. I hese limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful

# **Warranty Information**

#### **Warranty Registration**

- For 2 years from the date of installation when registered within 60 days of the installation date or 26 months from the origin purchased date (this warranty excludes consumables such as batteries) will be free from defects in material and workmanshi under normal use and regular service and maintenance.
- For warranty issues, please contact the HVAC professional that installed this product.
- · You can register your products by sending the Warranty Registration Form either by mail or electronically:

## Mail to:

Habitat Technologies Warranty Registration Dept. 330 East 38th Street

New York, NY 10016-0444

Warranty Registration Form





www.habitattechnologies.com



HC-QG-HTM-01-202007 v1



# Resetting the HomeLink Module

Press and hold the center button on the module till all three LED lights turn solid orange and then quickly release the button.







After the HomeLink is reset it's LED display will show the above color pattens and is ready to link up to the App.