

INSTRUCTIONS HOW TO REPAIR ECOTEAK DECKING




The tools

There are 3 methods :

A) **Small holes or black spots :**

For small holes, the best way is to use EcoTeak plug and super glue :

1. Drill a hole that cover the spot/hole
2. Use the correct EcoTeak plug in a similar size as the hole
3. Apply a drop of super glue
4. Fill the hole with EcoTeak plug
5. Press down the plug
6. Use a chisel to cut off excess plug or glue
7. Sand off the area to make it smooth
8. Stroke a couple of times lengthwise with an 80-grit sanding paper.

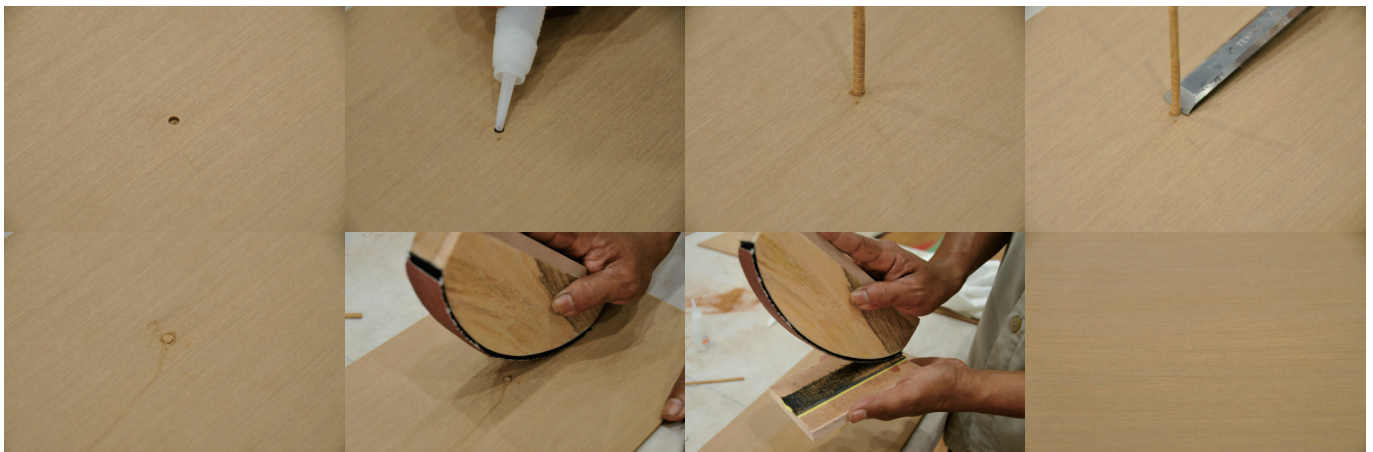

B) Non Deep Scratches :

1. Stroke a couple of times lengthwise with an 80-grit sanding paper.



C) Deep Cuts :

For bigger cuts use EcoTeak dust and super glue :

1. Clean the surface so the glue stick to the surface
2. Fill the cuts with EcoTeak dust to the same level as the decking surface
3. Apply a drop of super glue on top of the dust
4. Use a chisel to cut off excess glue dust
5. Sand off the area to make it smooth
6. Stroke a couple of times lengthwise with an 80-grit sanding paper.

