

Breakout-Box Anschluß



For measurements, a 1-124 T94 and a 1-62 PIN T60 box can be connected to the Y cable 02-340 of the control unit. The socket designations correspond to the pin numbers on the control unit.

A 1-62 corresponds to the T60 (Box 1-62) connector of the engine control unit.

B 63-124 and C 125-186 correspond to the T 94 Box (1-62 and 63-124) connector of the engine control unit.

Please note:

Avoid short-circuiting the sockets. The control unit could be damaged.

For resistance measurements on sensors and actuators, disconnect the wiring harness from the engine control unit.