

JK PB Series BMS Update Firmware Manual

1. connect PC to RS485-1 port
2. Set DIP to 1000
3. turn on BMS with power button
4. start PC software
5. select 3 vertical dots in the top right
6. select Upload Firmware
7. select correct firmware file for BMS
8. click Start Updating or Force Updating button on screen
9. contact JK-BMS through <http://www.jkbms.net/contact-us> to receive update code
10. enter code within 15minutes after receiving it
11. PC software is now waiting for BMS to update
12. push BMS power button again and don't release it until you see message under 16.
13. push reset button on BMS communication board once
14. confirm that firmware update starts through PC software
15. keep power button pushed until firmware is successfully updated
16. confirm firmware update successful! message on screen. Release BMS power button
17. be aware, that the BMS has now reset to factor default settings