



STRIKE FUELS
INTEGRATED FUEL SOLUTIONS

Operators Instructions 13,000L Tank

HOW TO DISPENSE FUEL FROM A 13,000L TANK

1. DRIVER_

Enter driver PIN Number, then press enter.

2. VEHICLE_

Swipe vehicle tag over sensor.

3. VEHICLE ODOMETER

Enter vehicle odometer (if applicable), then press enter.

4. REFUEL

Lift nozzle from cradle and commence refueling.

Replace nozzle back into cradle.

Refueling complete.

****PLEASE NOTE***

The system will time out after 2 minutes if no pumping has commenced. If this occurs, repeat all steps from 1 onwards.

Safe Fill Instructions

Before Refueling


- Only **DIESEL** operated vehicles to be refueled at this site.
- No naked flames or hot work to be used, or conducted, within **4m** of tank.
- Park vehicle in designated refueling zone.
- No unauthorized persons* are to enter the exclusion zone during refueling.
- Ensure vehicle is parked with handbrake applied and vehicle ignition switched off.
- No mobile phones, cigarettes or any considered ignition sources are to be within exclusion zone whilst refueling vehicles or when maintenance procedures are in operation.

Refueling Vehicle

1. Driver will find this screen on display on arriving at tank "Driver:___"



2. Enter Driver ID into keypad
Press Enter
Present keytag to display
(Display will instruct when to commence)

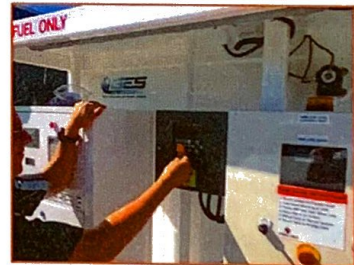

3. Enter 'Mileage' into keypad (If requested)
Press Enter



Lift nozzle from dispenser

(ensuring there are no kinks in hose)

Place nozzle into vehicle fillpoint securely

Press nozzle slowly until diesel is flowing freely into tank.

(When nozzle detector senses fuel (maximum level) auto shutoff will be engaged)

Remove nozzle carefully, holding in upright position and place firmly back in cradle of pump

(pump will disengage and shut off)



Whilst refueling, if excessive fumes and/or leaks are detected from pump or hoses, IMMEDIATELY hit the emergency button (as pictured), DISCONTINUE use and REPORT to office or supervisor.

