## **HM4.1** Service Checklists

Component of Service	Α	В	С	Tasks	
ENGINE GENERAL					
Oil Levels	<b>√</b>	<b>√</b>	<b>√</b>	Check oil levels and top up as necessary: engine, transmission, rear axle/s, front driver axle if applicable, power steering reservoir and oil lubricated front wheel bearing	
Engine Oil		<b>√</b>	<b>√</b>	Change engine oil	
Engine Filters		√	<b>√</b>	Replace engine oil filter (including centrifugal filter), fuel filters (including fuel water separator)	
Air Compressor	$\checkmark$	$\checkmark$	<b>√</b>	Check hose and pipes for clearance and condition	
Air conditioner compressor mounting		✓	<b>√</b>	Check for tightness	
Engine Mounts		$\checkmark$	$\checkmark$	Check condition	
Belts and Pulleys	$\checkmark$	$\checkmark$	$\checkmark$	Check condition of belts. Replace if required.	
Engine air cleaner	Replace element when service indicator "pops" or every C service – which ever come first				
Air intake system	<b>√</b>	<b>√</b>	<b>√</b>	Check for leaks and damage. Examine all intake components on the "clean side." Condition and sealing of rubber elbows and hump hoses, clamp tensions and orientation, material integrity of intake pipes, including welds on fabricated parts, other sealing and mating surfaces as applicable and general pipe clearances to other components.	
Exhaust System	<b>√</b>	<b>√</b>	/	Inspect system for leaks	
Adblu System		<b>√</b>	<b>√</b>	Check for leaks: air and Adblu	
Electrical connections	<b>√</b>	<b>√</b>	<b>√</b>	Check integrity and mounting of electrical harnesses and connections.	
Starter Motor and Alternator		$\checkmark$	<b>√</b>	Check operation	
RADIATOR					
Engine Coolant	<b>√</b>	<b>_</b>	<b>/</b>	Check for leaks. Check level and top up as necessary.	
Radiator		<b>√</b>	<b>√</b>	Check mounting bolts and replace as required. Check shroud clearance and adjust as required	
Radiator hoses	<b>√</b>	<b>√</b>	<b>√</b>	Inspect hoses for routing, chafing and leaks. Check all hose fitting s for tightness	
CLUTCH					
Release bearing	<b>√</b>	<b>√</b>	/	Lubricate sparingly. Required extended fittings.	
Clutch	<b>√</b>	<b>√</b>	<b>√</b>	Check clutch pedal for free play, operation and adjustment.	
Clutch brake operation	<b>√</b>	<b>√</b>	<b>√</b>	Check and adjust as necessary	
TRANSMISSIONS	•	•	,		
Check oil level	<b>√</b>	<b>√</b>	<b>/</b>		
POWER STEERING	,	,			
Drag link & Pitman arm	<b>√</b>	<b>√</b>	/	Check clamp torque	
Steering wheel play & centralise	<b>√</b>	<b>√</b>	/	Check & adjust if required	
Hose & fittings	<b>√</b>	<b>√</b>	<b>√</b>	Check for leaks	
Fluid level	./	./	./		

## **HM4.1** Service Checklists

Component of Service	Α	В	С	Tasks
FRONT WHEEL BEARINGS				
Front wheel bearings oil level	1	1	<b>√</b>	
Front wheel bearings end play	<u>/</u>	<b>V</b>	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	More frequently under severe working conditions
FRONT AXLES			•	
Spring shackle & hanger brackets	<b>√</b>	<b>√</b>	<b>√</b>	Lubricate. More frequently under severe working conditions
Spring pins	$\checkmark$	$\checkmark$	$\checkmark$	
Shackle pins & bushes	$\checkmark$	$\checkmark$	$\checkmark$	Check for wear and lubricate with truck weight lifted from suspension
King pins, bushings, thrust bearings & spindles	<b>√</b>	<b>√</b>	$\checkmark$	More frequently under severe working conditions
Suspension U-bolt torques	$\checkmark$	$\checkmark$	$\checkmark$	
General inspection for wear	<b>√</b>	<b>√</b>	<b>√</b>	
Front axle steering stops			·	First service. Check for clearance between tyres and fram/components
Steering & tie rod arms	$\checkmark$	$\checkmark$	$\checkmark$	
DRIVE SHAFTS				
U-Joints	<b>√</b>	<b>√</b>	<b>√</b>	Lubricate. More frequently under servere working conditions
Slip joint	$\checkmark$	$\checkmark$	$\checkmark$	
Centre bearing (if fitted)	<b>√</b>	$\checkmark$	$\checkmark$	Inspect only as non-greaseable sealed unit
REAR AXLES				
Check oil level	<b>√</b>	<b>√</b>	<b>√</b>	
Change oil			<b>√</b>	Drain mineral oil on first service or 10,000km – whichever occurs first. Refill with Synthetic oil. Take oil samples to determine correct oil change interval. For severe working conditions, refer to OEMS service manuals
Change oil filter		$\checkmark$	$\checkmark$	
REAR SUSPENSION				
General inspection for wear	<b>√</b>	<b>√</b>	<b>√</b>	More frequently under severe working conditions.
CHASSIS				
All chassis lube/grease points	<b>√</b>	<b>√</b>	<b>√</b>	More frequently under severe working conditions
Fuel tank mounting		$\checkmark$	$\checkmark$	
FIFTH WHEEL				
Check & lubricate	<b>√</b>	<b>√</b>	<b>√</b>	
BATTERY & ELECTRICS				
Visual inspection/loose connections	✓	✓	<b>√</b>	
Hold down & battery box mounting bolts.		$\checkmark$	$\checkmark$	
Operation of lights & instruments	$\checkmark$	$\checkmark$	$\checkmark$	

## **HM4.1** Service Checklists

Component of Service	Α	В	С	Tasks		
BRAKES: FRONT & REAR						
Brake adjustment	$\checkmark$	$\checkmark$	$\checkmark$			
Wheel seals	$\checkmark$	$\checkmark$	$\checkmark$			
Brake linings remaining	$\checkmark$	<b>√</b>	$\checkmark$	Replace if required		
Hoses/fittings	$\checkmark$	<b>√</b>	$\checkmark$	Check for damage & leaks		
WHEELS & TYRES						
Wheel nut torque	$\checkmark$	✓	✓			
Wheels & tyre inspection, yellow pointers				Daily and Weekly Checks (Drivers/General Manager)		
CABS, DOORS, WINDOWS,						
ANCILLARIES						
Glass for cracks & scratches	$\checkmark$	$\checkmark$	$\checkmark$	Daily check		
Mirrors	$\checkmark$	$\checkmark$	$\checkmark$	Daily check		
Horns: air & electric	$\checkmark$	<b>✓</b>	<b>✓</b>	Daily Check		
Door lock, hinges, latches and striker plates	$\checkmark$	$\checkmark$	$\checkmark$	Lubricate sparingly		
Windscreen wipers and washer	$\checkmark$	$\checkmark$	$\checkmark$	Fill washer bottle		
operation MISCELLANEOUS						
WISCELLANEOUS						
Fuel filters/water separators		/	1			
PART OF DAILY PRESTART & ONROAD CHECKS						
Steering/steering play	<b>√</b>	<b>√</b>	<b>√</b>			
Gear shifting	<b>√</b>	<b>√</b>	<b>√</b>			
Brake operation	·	<i></i>	<i></i>			
Engine operation (noise surging, black smoke)	<b>√</b>	<b>√</b>	<b>√</b>			
Throttle operation	$\checkmark$	<b>√</b>	$\checkmark$			
Air seat operation	√	<b>√</b>	<b>√</b>			
Seat belt operation	✓	<b>√</b>	√			
Headlights, Hi/lo; tail; stop; reverse & indicators	√	<i>√</i>	<i>√</i>			
Speedometer/odometer	$\checkmark$	$\checkmark$	$\checkmark$			
All instruments & gauges	$\checkmark$	<b>√</b>	<b>√</b>			
Cabin interior lights	<b>√</b>	<b>√</b>	<b>√</b>			
ABS warning lights	<b>√</b>	<b>√</b>	√			
Low air/brake pressure warning devices	<b>√</b>	<b>√</b>	<b>√</b>			
Hydraulic vehicle jack				Check fluid level before each use – change oil annually		