

maxell

User Manual

 
household use

*Do not wash

Eyelash curler

MXEL-200

Thank you for purchasing the Maxell product. Please carefully read this instruction manual before use and use it correctly.



Contents	Page
1 Introduction	2
2 Preparation Before Use	2
3 Part Names and Function	4
4 Safety Precautions	5
5 Examples of Use	8
6 Maintenance	10
7 Storage Method	10
8 Troubleshooting (When problems arise)	11
9 Specification	11

1 Introduction Keep the following in mind when reading the Instruction Manual.

- This Instruction Manual may be subject to change without prior notice.
- In order to improve the product, external appearance or part of the specifications may be subject to change without prior notice.
- Unauthorized duplication of part or all of this Instruction Manual without permission is prohibited except for the case of personal use. In addition, do not reprint this Instruction Manual without permission.

Disclaimer

- Maxell shall not be responsible for any damage caused by fires, earthquakes, action of a third party, any accidents, intended or unintended misuse or other usage under abnormal conditions.
- We do not assume any responsibility for any collateral damages arising from the use or inability to use this product (loss of business profit, interruption of business).
- We do not assume any responsibility damage caused by any usage not described in the instruction manual.
- In regard to usage outside Japan, we do not accept any responsibility.
- Illustration is indicative; it may differ from the actual.

2 Preparation Before Use

How to insert batteries

Notes on using batteries

1. Do not use a battery that is leaking.
2. Use only Alkaline batteries (AAA batteries).
 - If other types of batteries (such as rechargeable batteries) etc. are used, the power is likely to be insufficient or battery life is shortened and cannot fully perform its potential.
3. Please insert the battery correctly according to the indication on the main unit and align ⊕ and ⊖.
4. Use batteries within the recommended usage period.
5. Please remove used up batteries immediately.
6. Dispose used batteries according to the local regulations of your area.


• **Battery life varies with ambient temperature.**

(When using Maxell Alkaline Battery Voltage LR03 (T) once a day for about 2 minutes each time)

- Approximately 4 weeks at ambient temperature 25°C.
- Approximately 2 weeks at ambient temperature 15°C.

Depending on usage conditions, such as low ambient temperature, the number of times of use is reduced.


1 Remove batteries by pulling out the battery cover in the direction of the arrow.

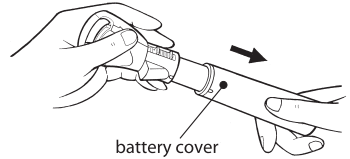

2 Insert 2pcs AAA alkaline battery correctly according to the display on the main unit.



3 Align the mark on the battery cover with the switch, firmly push the battery cover all the way in.

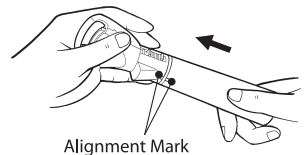

3 Part Names and Function

Head Part

Thermal Pad


Hold the eyelashes between the head part and the thermal part to form curl.

Operation Button

The thermal pad rises when it is pressed, and goes down when released.

Alignment Mark

Battery Cover

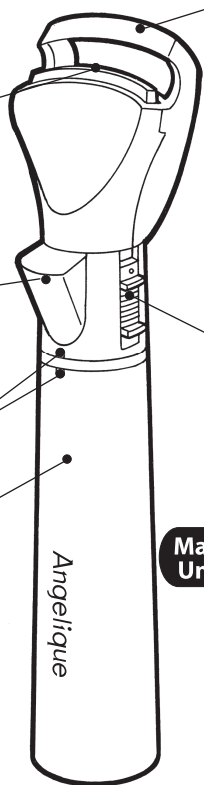

Power Switch

When the switch is slide up, the power will be turned "ON", the eyes lamp will light up and the thermal pad will warm up.

Main Unit





Eyes Lamp

Illuminate the eyes. It is also used as a power indicator lamp to indicate if the power is left on and also the remaining battery life.

4 Safety Precautions Make sure to read the following

In this instruction manual, important items are stated in order to prevent harm to people who use it and other people, also loss and damage of property and to use it safely and correctly. Please read the text after understanding the following contents (display /figure symbols) and observe the items described.

Explanation of Expression










Expressions	Meaning of Expressions
 Warning	Warning refers to misuse which might lead to death or serious injury ^{*1} .
 Caution	Caution refers to misuse which might lead to injury ^{*2} and may cause property damage ^{*3} .

*1: Serious injury means injury with after effects such as loss of sight, burns, electric shock, bone fracture or poisoning and injury which requires hospitalization or long-term hospital visits for medical treatment.

*2: Slight injury means injury, burns, or electric shock which does not require hospitalization or long-term hospital visits for medical treatment.

*3: Damage to property means consequential damage related to house, household goods and livestock or pets.

Explanation of Symbols

Graphic symbols	Meaning of symbols
	Prohibited  This symbol signifies specific prohibitions in the handling of products. Pictures and sentences in or near the figure symbol indicate specific prohibited contents. (Example:  Disassembly prohibited)
	Caution  This symbol calls attention to ignition, electric shock, high temperature, etc. in the handling of products. Pictures indicate specific caution notes. (Example:  Electric shock warning)
	Indication  This symbol forces a user to perform an action based on the instruction in handling of the product. Specific content forced is shown in or near the symbol by picture or words. (Example:  Disconnect a plug from the outlet)

Warning



Prohibited

- Do not press the thermal pad against the eyelids. (It may cause burn)
- Do not use near children or infants. (It may cause accidents or injury)
- Do not use while traveling in cars. (It may cause accidents)

Warning



Prohibited

- Do not throw the main unit or batteries into the fire.
(It may cause accidents or injury)
- Do not allow children to use. Also keep it out of reach of infants.
(It may cause burns or injury)

Warning



Prohibited

- Do not use for any other purposes than eyelash curling.
(It may cause accidents or malfunction)
- Do not use while wearing contact lenses.
(It may cause the lens to deform and damage the eyes)
- Do not use if you are suffering from an eye disease.
(It may worsen symptoms)
- Do not share the usage of the device with family members or other people (unspecified number) or use for business purposes.
(It may cause infection or malfunction)
- Do not leave the power switch on.
(It may cause fire or malfunction)
- Do not use on false eyelashes or eyelash extensions.
(It may cause damage to eyes due to deformation and deterioration of adhesive)



mandatory compliance

- Do not leave it on flammable materials such as vinyl and paper while the heater is hot.
(It may cause fire or malfunction)
- Do not drop or subject to a strong impact.
(It may cause injury or malfunction)
- Before using, check the comb part of the head and the heater to see there is no deformation.
(It may cause injury or malfunction)
- When around people, pay attention to unexpected movement whilst using it. (It may cause injury)
- If you feel abnormalities in eyes and eyelids during use or after use, stop using the device and consult a specialist.

Caution



mandatory
compliance

- **Failure to observe the following may cause injury or malfunction due to overheating, leakage or explosion of the battery.**
 - Use correctly according to the usage indication of batteries.
 - Be sure to turn the switch "OFF" after use.
 - Check leaks periodically.
 - If the device is not used for more than 1 month, remove the battery.
 - Remove used up batteries immediately.



Keep dry

- **Do not rinse with water. Do not soak in water or splash with water. (It may cause malfunction or short circuit)**



Prohibited to
use in places
subject to water

- **Do not use or leave in places subject to water and humidity such as bathrooms. (It may cause malfunction or short circuit)**



Prohibited to
disassemble

- **Do not remodel. Also, repair should be only carried out by repair technicians. (It may cause injury or malfunction)**


5 Examples of Use

Caution

- Do not press the thermal pad against the eyelids, since the thermal pad is hot.
- When mascara is on the eyelashes and you feel any abnormalities with your eyes or eyelids, stop using it immediately.
- When used while mascara is on, wait until dry.
- If you feel any abnormalities with your eyes or eyelids during and after using, stop using it immediately and consult a specialist.


- 1 Turn the power switch "ON" and wait for approximately 10 seconds until the thermal pad warms up.**

The eyes lamp will light up.

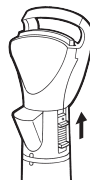

- 2 Hold the main unit tilted at about 20 degrees, place the head part on the root of the eyelashes and keep pressing the operation button for 5 seconds.**


Use it while checking with a mirror so as not to damage your eyes.

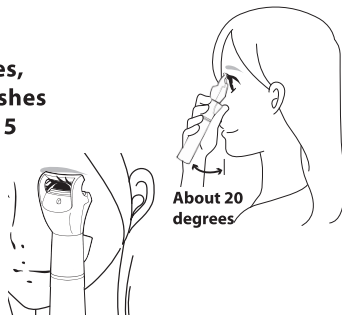

- 3 In the same way, split the process into about 3 stages, sliding towards the tips of the eyelashes.**

(In order of (A), (B) and (C) in the diagram)

Adjust with the pressing force of the operation button and the curling time to achieve your desired curl.

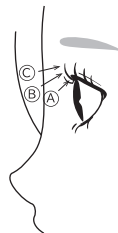

- 4 Be sure to turn the power switch "OFF" after use.**

Advice to achieve beautiful curls

① Hold firmly from the root

Pull the eyelid lightly upward with your fingers and hold and press the eyelashes from the root with the thermal pad.

(It will make it easier if you lift your chin and look down.)




② Make the middle floating slightly

Pull out a bit and move the thermal pad to the middle of the eyelash and then pinch it again.



③ Be gentle for the tip of the eyelashes by releasing the force


Release pressing force further, and lightly slide toward the tips of the eyelashes and lightly press at the angle where the head part touches the eyelid.

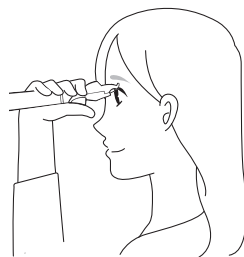

④ For the corner of the eyes, curl outward away from the center of the face

Tilt the main unit to hold eyelashes so that it spreads outward from the center of the face.

(Use the end of the head part)

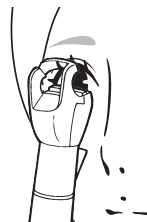

6 Maintenance

Caution

- Be sure to turn the switch “OFF” while cleaning. (It may cause burns.)
 - Do not wash with water. Also, do not soak in water or splash with water. (It may cause malfunction)
 - Wipe off the dirt on the main unit with a cloth firmly squeezed with water. Do not use alcohol, benzine or thinner. (It may cause deformation or discoloration)
-
- **Wipe off the dirt on the main unit with a cloth containing diluted neutral detergent liquid.**
 - **Wipe off the dirt on the thermal pad gently with a damp tissue.**

7 Storage Method

Store it in a place with little humidity and dust.

Caution

- Do not leave in places subject to water or humidity. (It may cause malfunction.)

Caution

- **Do not leave it where it is exposed to direct sunlight (such as inside a car in the summer), or near heating equipment.** (It may cause deformation or discoloration)

8 Troubleshooting (When problems arise)

Symptom	Where to check	How to fix
<ul style="list-style-type: none">• The thermal pad does not warm up.• The eyes lamp does not light up.• The eyes lamp lights up but it turns off in a few seconds.	Is the battery inserted incorrectly?	Please check⊕and⊖, then insert the battery again.
	Is the battery exhausted?	Please replace with a new alkaline battery.
Eyelid is hot while using.	Is it used within 5 seconds after pressing the operation button?	Please use it within 5 seconds.
	Are you pressing the thermal pad against your eyelid?	Please do not use by pressing the thermal pad against the eyelid.
It became difficult to curl.	Is the thermal pad dirty with mascara etc.?	Please clean the thermal pad.
It takes time to warm up.	Ambient temperature is low.	When the ambient temperature is low, it takes time to warm up the heater, and the life of the battery becomes reduced. It is recommended to use at room temperature above 15°C.

9 Specification

Power	DC 1.5V AAA alkaline battery (LR03) 2pcs
Weight	Approx. 60g (not including battery)

Maxell Asia, Ltd.

<http://www.maxell.com.hk>

Maxell, Ltd.

<http://www.maxell.jp>