



1

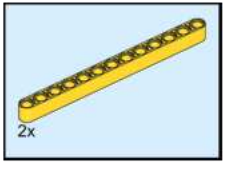

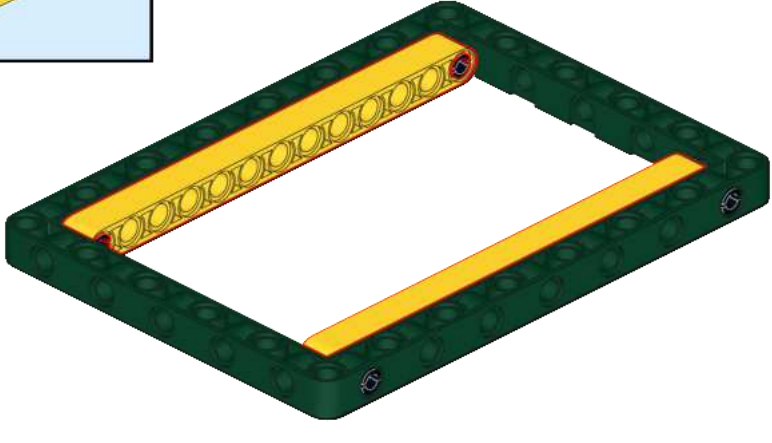


2







3

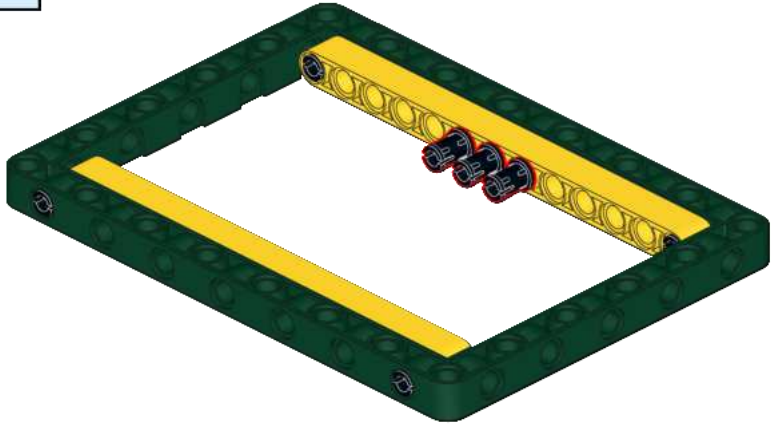



4

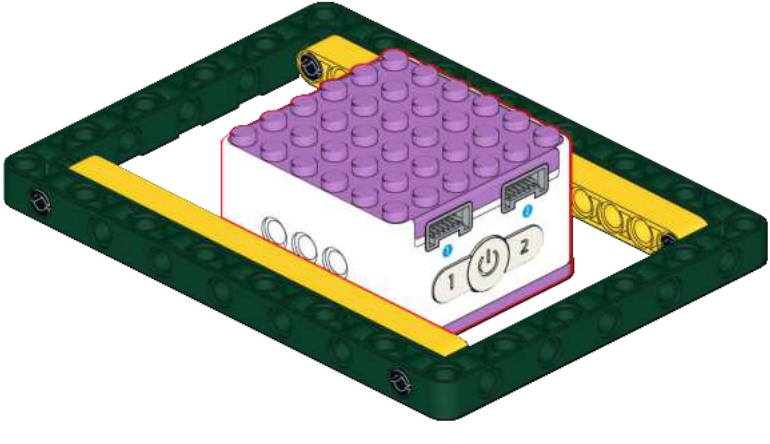

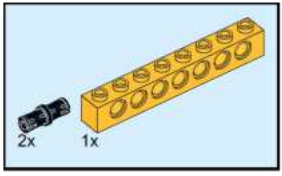



5

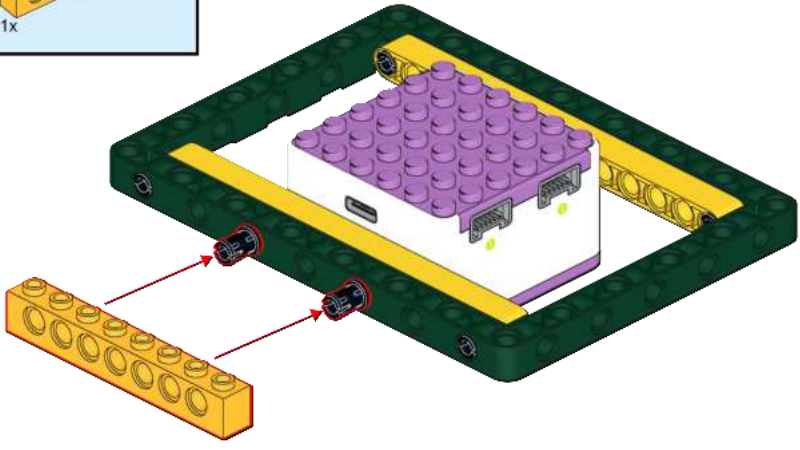

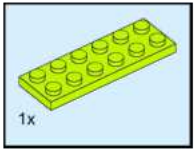


6

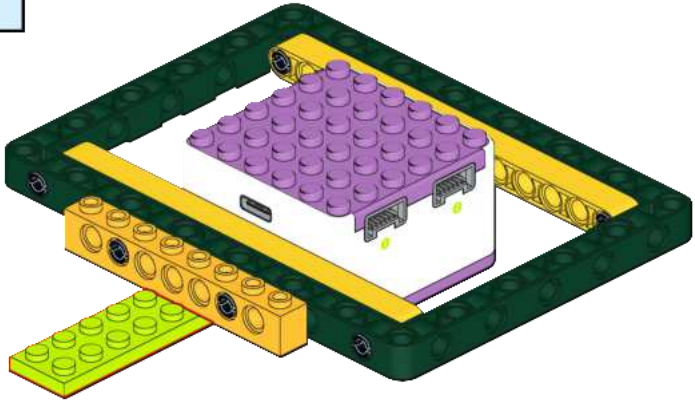


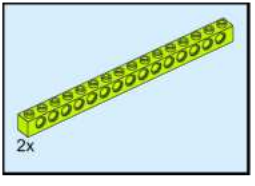

7

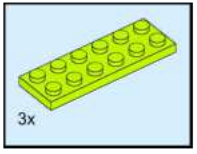


8

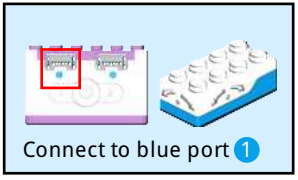

9

10

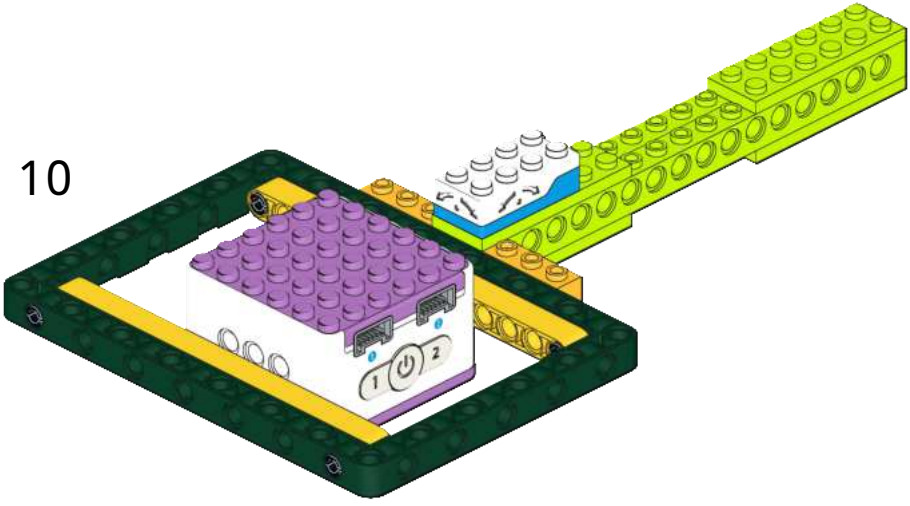

Ensure Bluetooth is Connected Properly




Program for fishing tool. Controls movement in four directions.

Ensure Bluetooth is Connected Properly



Program for treasure movement.

Ensure Bluetooth is Connected Properly

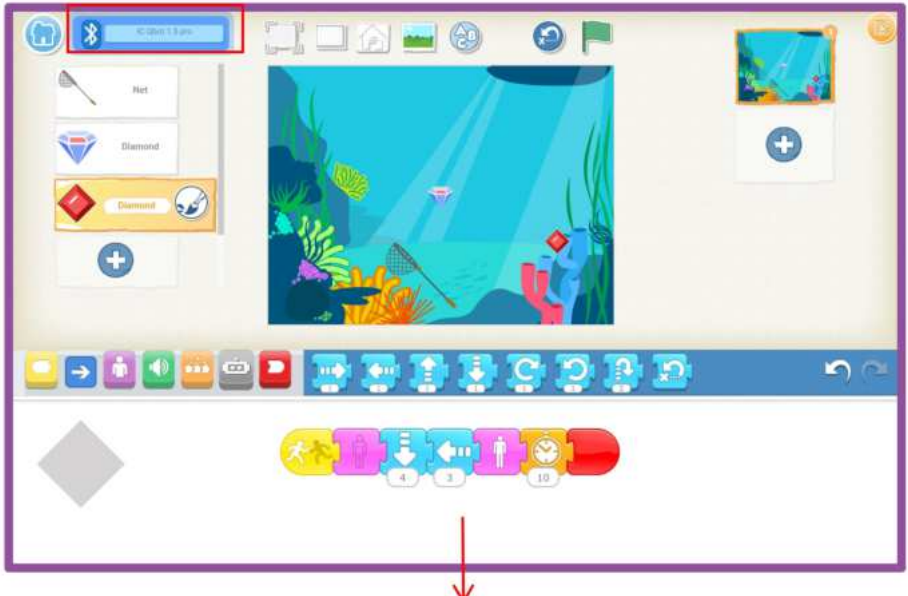

Program for treasure movement.