
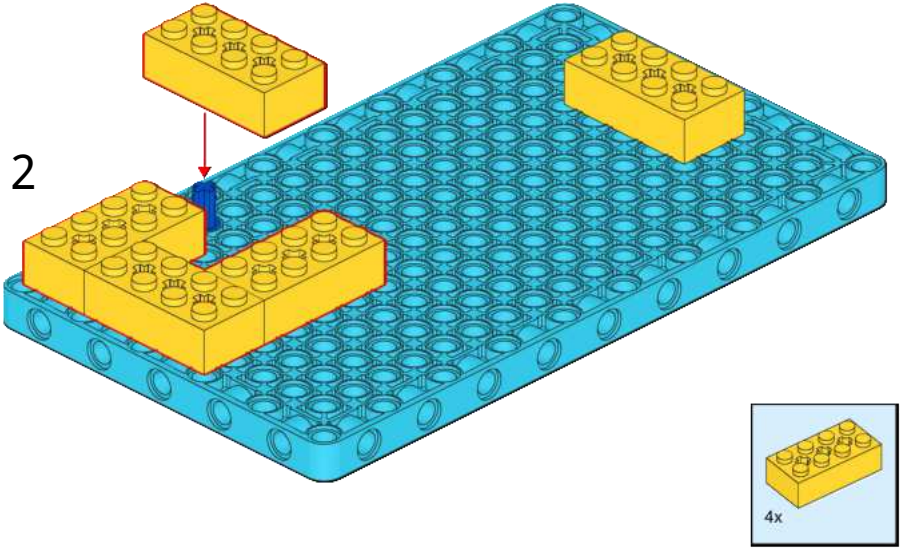



1


2
4x


3

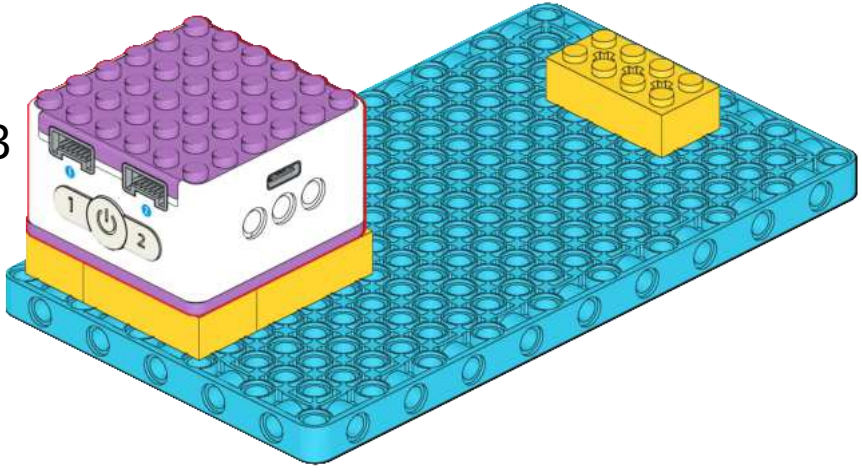


4

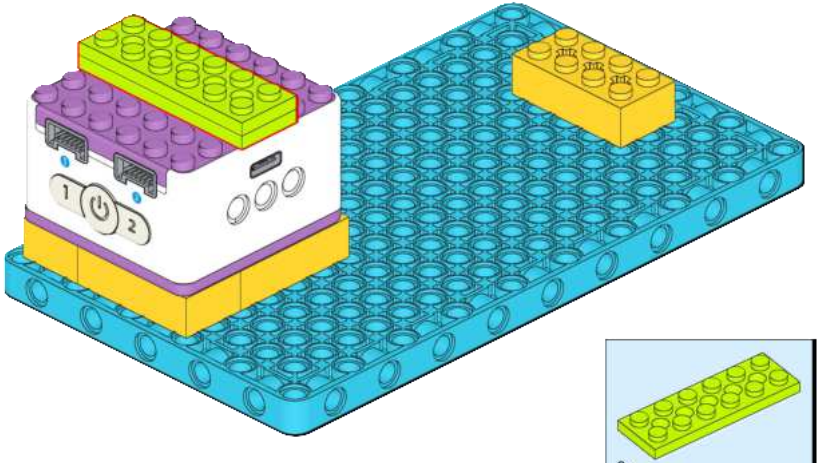


5

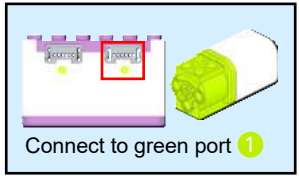


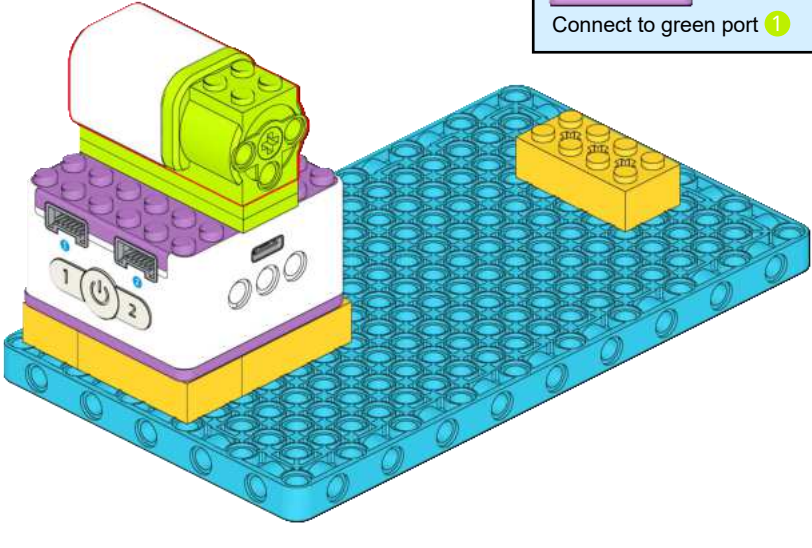


6

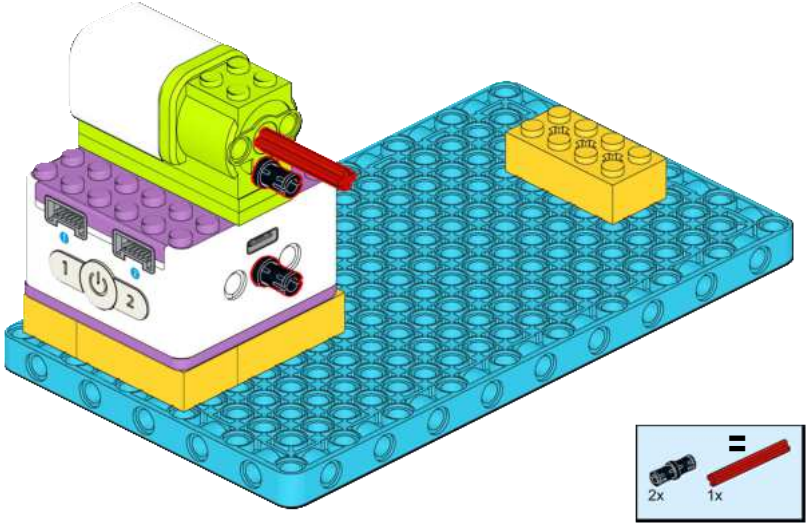


7

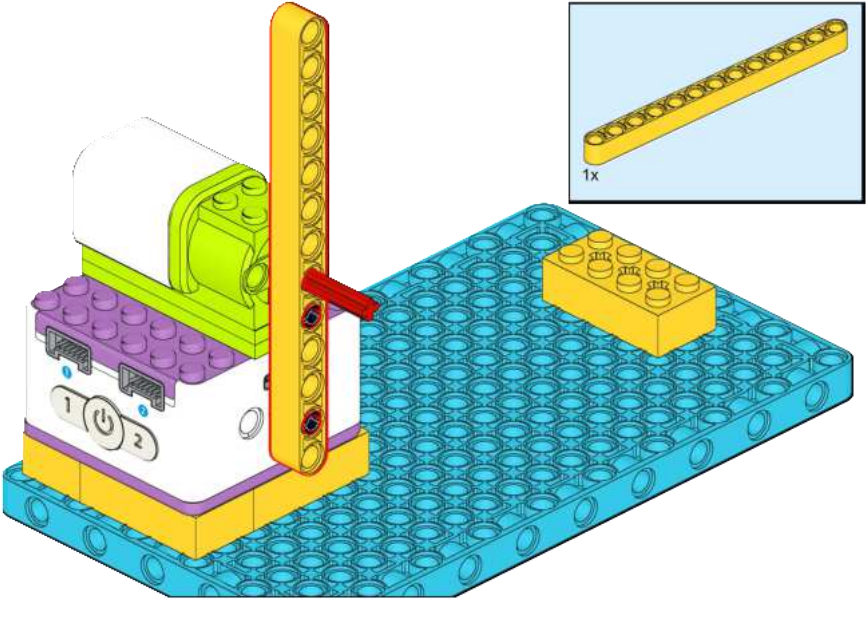


8

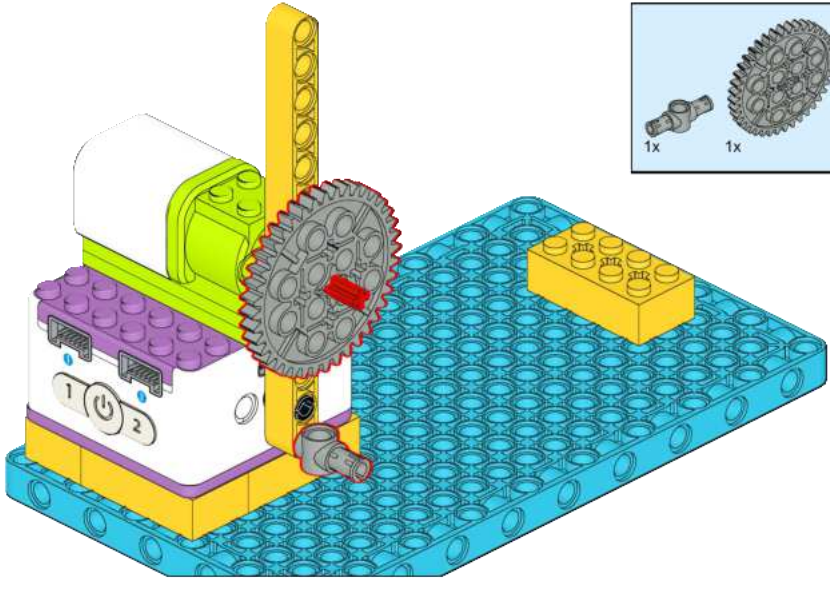

9

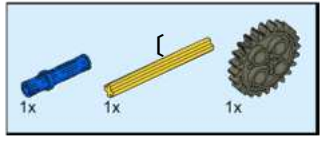


10

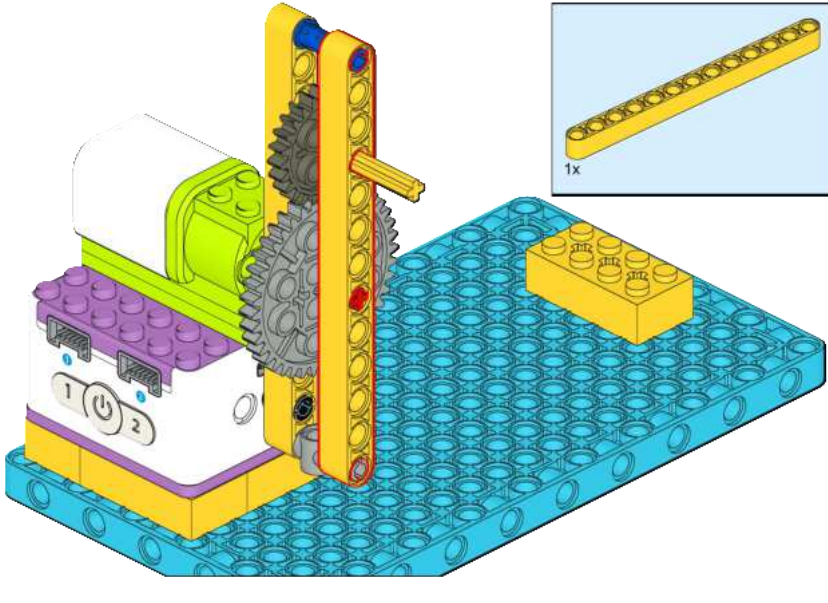




11

12

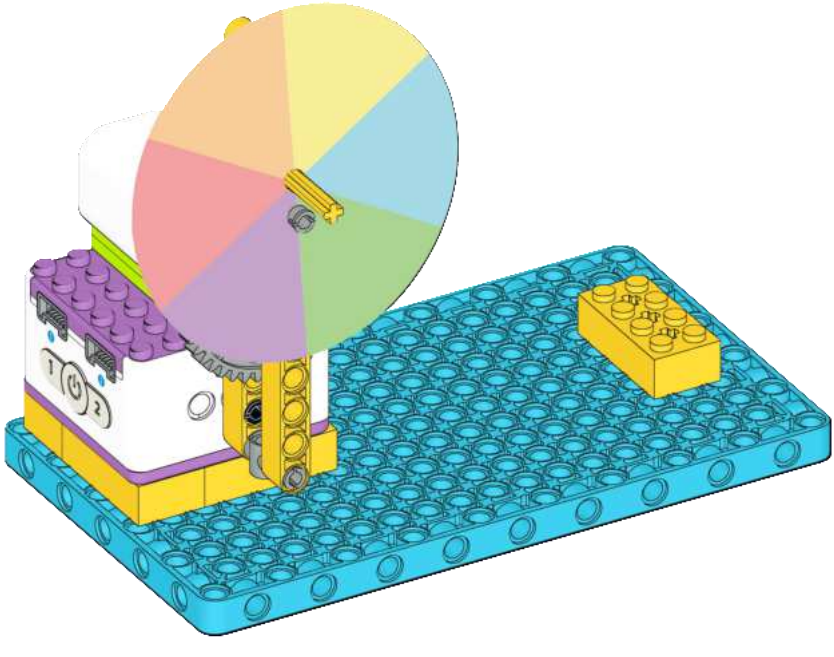





13

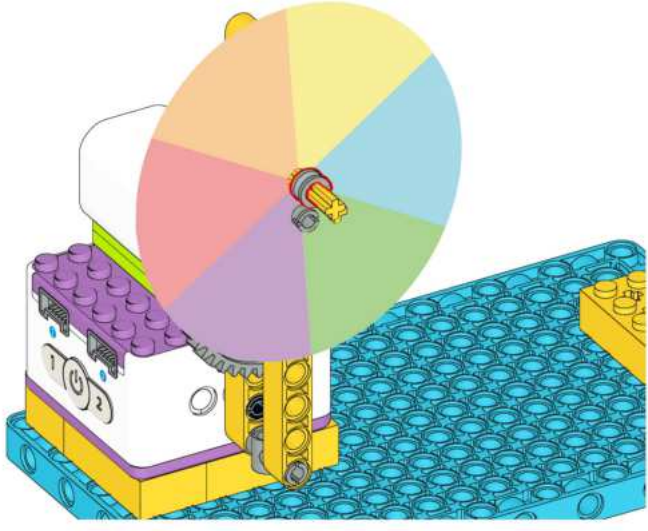


14

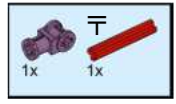

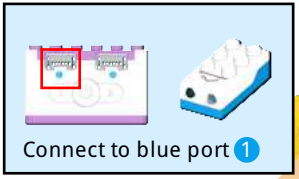

15

16

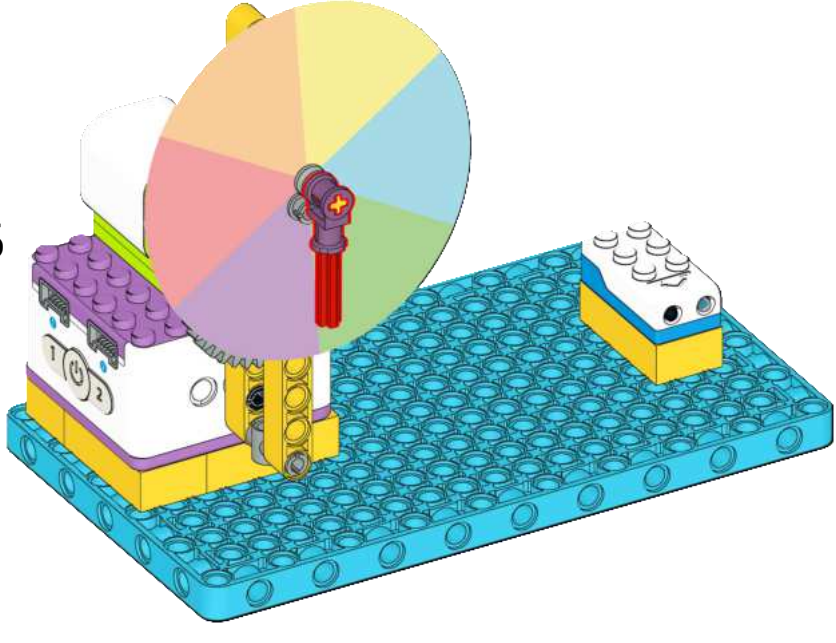

Ensure Bluetooth is Connected Properly



Approach the distance sensor, the motor rotates,
and move away from the distance sensor, the motor stops.