

— Installation —

[Part Number]: 6A1 492 FM


[Vehicle] 2015+ Subaru WRX (VAG)

[Product]: Power Brace, Front Member


[Kit includes]: M8 x 30 Bolt x4
M8 Flat Washer x4
M8 Spring Washer x4
Spacer x2




#1 Remove Headlight Washer Cover and nozzle

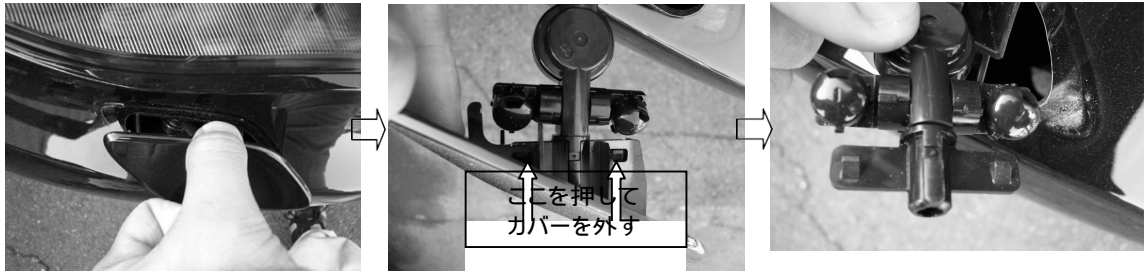


#2 Remove clip x3 and bolt x6

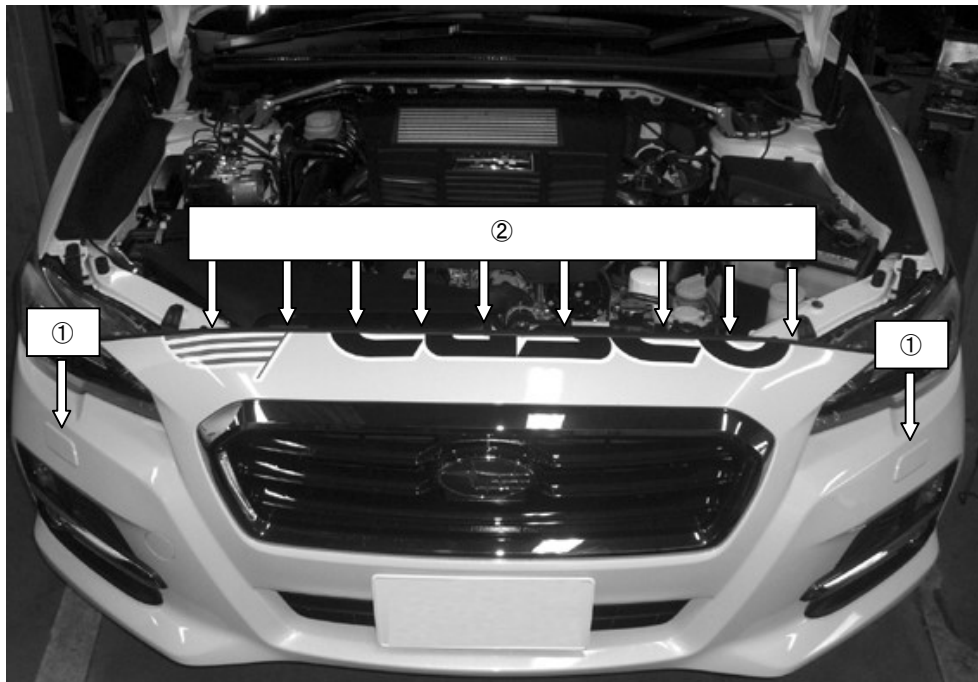

#3 Remove clickx1 from Fender (Both sides)

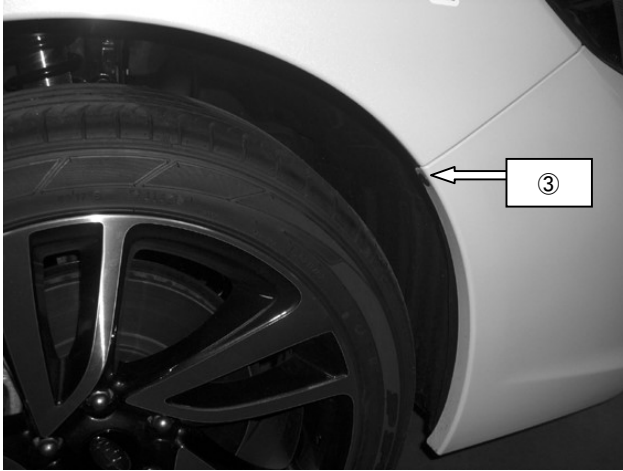


#4 Remove clips from under cover

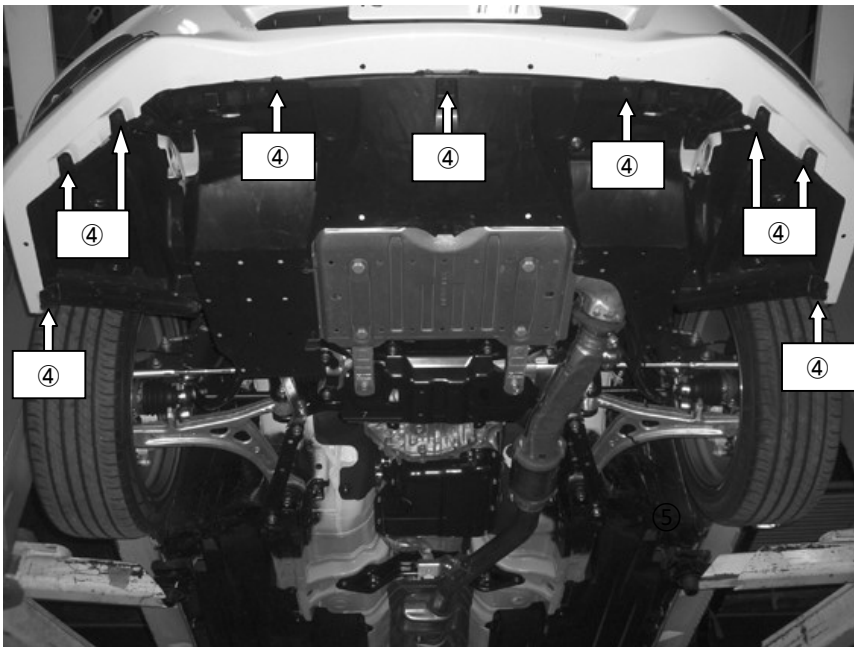


#5 Disconnect Fog Light connectors (Right & Left). Then remove front bumper cover.




- #6 Remove foams from both sides
- #7 Remove bolts (x2 each side)
- #8 Remove x8 bolts on center

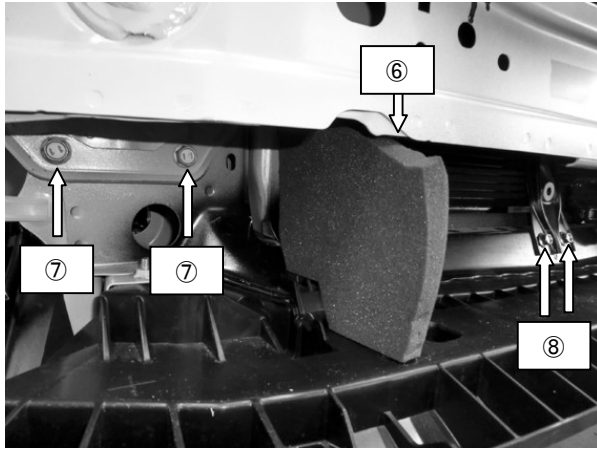

- #9 Install supplied spacers on both sides as showing following picture.

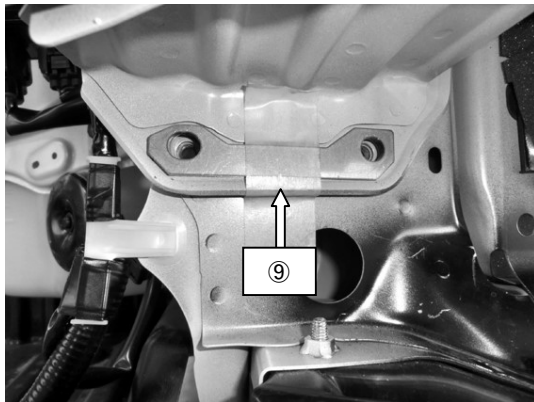

- #10 Install CUSCO Front Member Brace with supplied M8x30 bolts, M8 Washers, M8 Spring Washers. Then re-use OE bolts to install on center (#11)

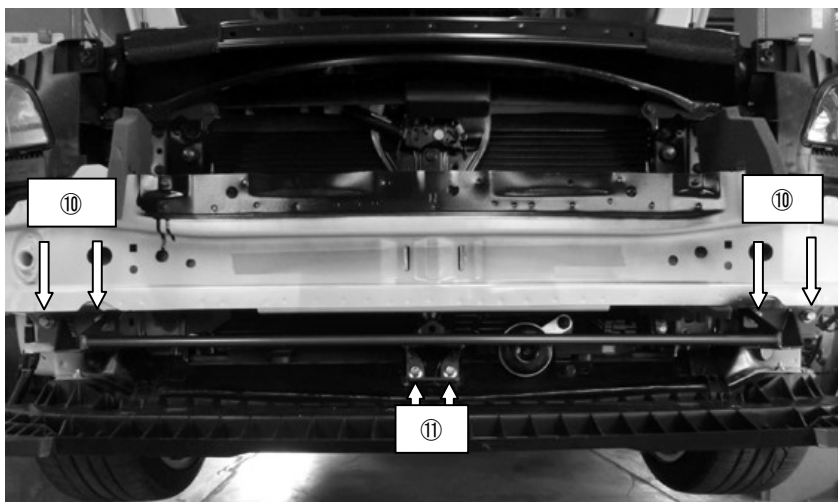

- #12 Re-install Front Bumper Cover