

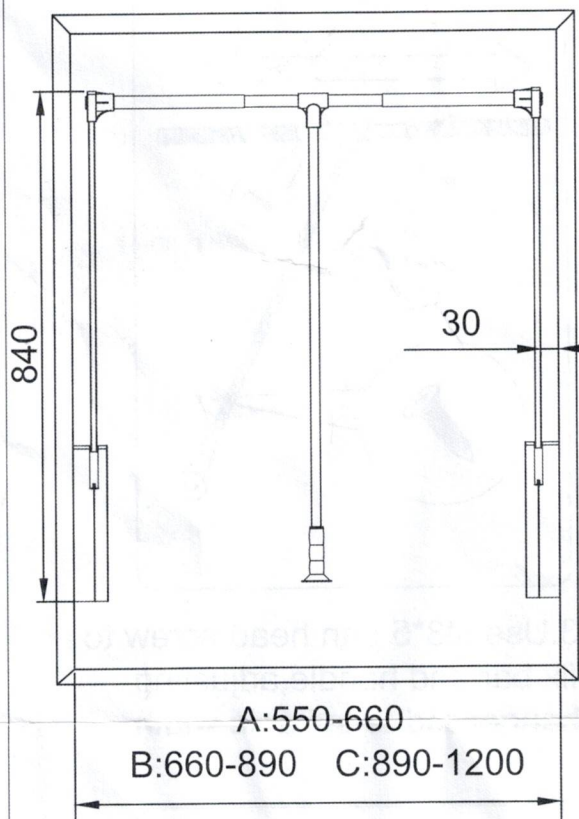



Wardrobe Lifter


Installation Instruction for G08



 2/PCS	 1/PC	 1/PC
 2/PCS (M8*35)	 18/PCS (PA4*20)	 2/PCS (PA3*5)
 1/PC		
 1/PC		
 2/PCS		

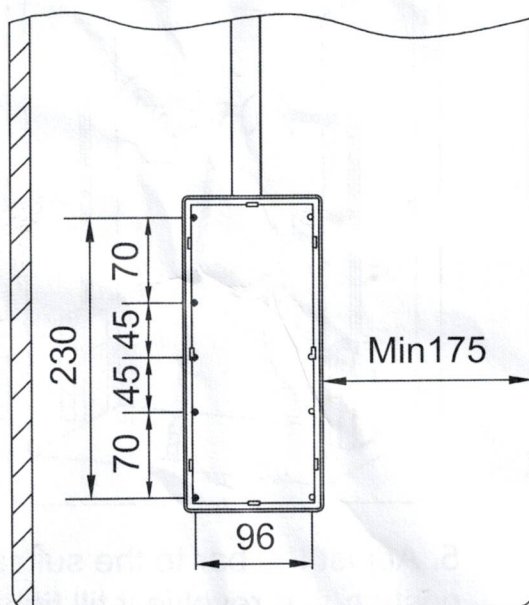

Schematic diagram of installation dimensions(the location indicated the position of screw showed in step 1)

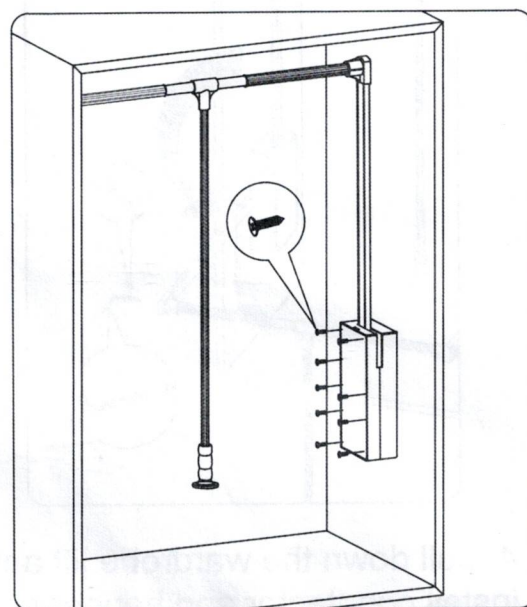

1. Use 18 pcs st4*20 sink head screw to fix the buffer system according to schematic diagram of installation