
VWVanagon – VW T3/T25 Wheel carrier mounting instructions

First clean the area where the support goes, and put some tape to protect from scratches.

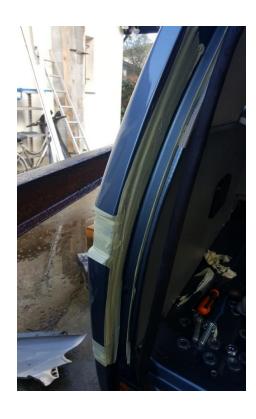








Then present the piece and mark the fixing holes

Remove the tape and repaint to protect from rust

Introduce the fixing plate through the gap of the air inlet

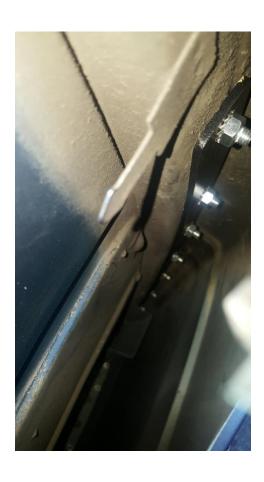



Present the wheel carrier and adjust the Uniball ball joints to leave it flat



Once straight, present the closure bracket and mark the holes. As before, first protect with tape



Mount the closure bracket and the internal reinforcement plate



Now mount the wheel and test. If we see that it drops a little

with the weight of the wheel, adjust by turning the corresponding uniball ball joint ...



We put the hydraulic in place and...

Enjoy !!!